

VIZU® 1100 PASS THROUGH ECONOMY



VI1100E

- Manual filling and draining water reservoir
- Thermostatically controlled environment
- Illuminated interior
- Multi Levels inner racks to promote FIFO (first in first out)

Contents

VIZU® 1100 PASS THROUGH ECONOMY 1

 1100 PASS THROUGH ECONOMY SPECIFICATION PAGE 3

 MODEL VI1100E 3

 Assembly and Installation Instructions 4

 Instructions for use 5

 Use of Pass Through machines 6

 Use of Accessory Parts 7

 Cleaning of Pass Through machines 8

 Cleaning instructions - Daily 13

 FAULT FINDING 14

Terms and Conditions 16


 Claims 16

 Returns 16

Damage Claim Form 17

Warranty 18

1100 PASS THROUGH ECONOMY SPECIFICATION PAGE

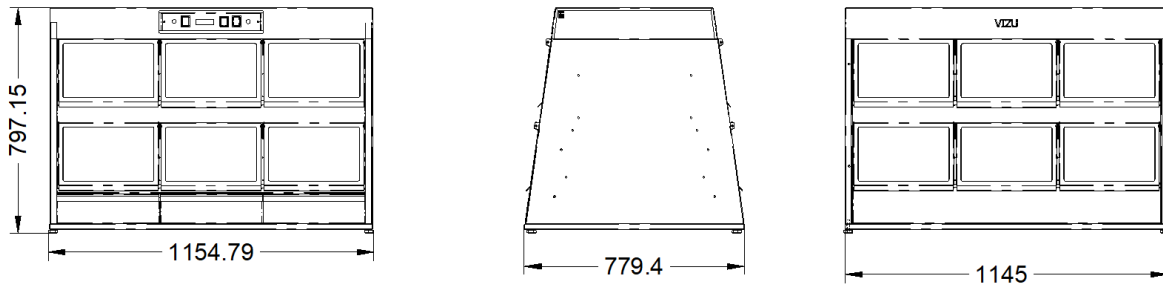

MODEL VI1100E

<p><u>Dimensions</u></p> <p>Height</p> <p>Width</p> <p>Depth</p>	<p><u>Machine</u></p> <p>797.15mm</p> <p>1154.8mm</p> <p>779.4mm</p>
<p><u>Weight</u></p>	<p>100kg</p>
<p><u>Electrical</u></p> <p>Running Amps</p> <p>Connection Type</p> <p>International Option</p>	<p>1 phase, 50HZ AC, 230v, 2Kw</p> <p>9 Amps</p> <p>BSCHUKO 2/3 PIN PLUG</p> <p>N/A</p>

All *Vizu Pass Through Economy* have been tested and checked for proper operation before leaving the factory.

Upon delivery please check the unit for damage. If the unit is damaged, contact the carrier, or Fast Food Systems, immediately and file a damage claim (found in the back of the manual) Please retain all packing materials.

Damage must be reported within 7 days of delivery

General Description

The unit has been designed to hold cooked foods in a humid atmosphere. Being a Pass Through unit the machine can be loaded from one side and unloaded from the other.

Assembly and Installation Instructions

1. Unpack machine from packaging
2. Peel all surfaces of plastic film and wipe down with warm soapy water
3. Position machine on a level surface
4. Machine must be filled daily with fresh water in tray
5. Machine must be plugged into a 13Amp power supply
6. Position perforated support channels across internal aperture, space to suit.
7. Place gastronome pans and wires into their positions between support channels.

Switch Controls

- Red Switch – ‘ON/OFF’
 - Controls the temperature within the cabinet
- Green Switch - ‘LIGHTS’
 - Operates the lights within the unit – Can work independently of the heat switch as a display feature
- Green Switch – ‘HUMIDITY’
 - Controls humidity in the cabinet, in the ‘Off’ position the cabinet becomes a heated dry cabinet

Instructions for use


1. Ensure Mains power is on – The green 'POWER' light should be lit
2. Ensure water tray is filled
3. Turn red 'ON/OFF' switch to 'ON'
4. Turn green 'HUMIDITY' switch to 'ON'
5. Leave the machine for 20 minutes to heat and humidify
6. Turn on 'LIGHTS' as required

LED Indication

- When the heater is on, it is lit green.
- When the heater is off (and water off), it is unlit.

Use of Pass Through machines

1. Switch the machine on (red switch), then switch the auto-fill and lights on (green switches).

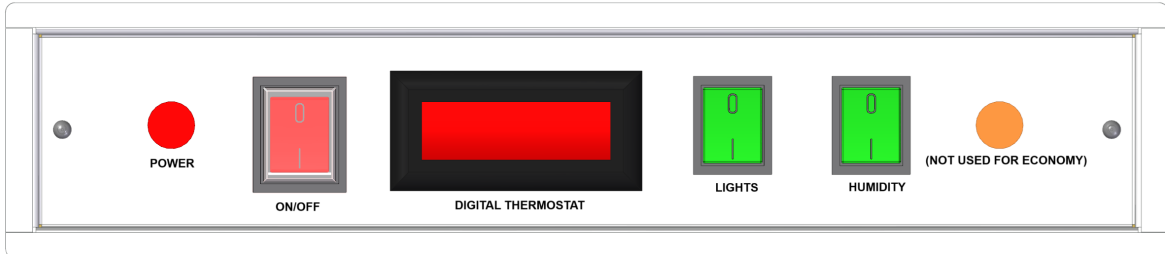

2. The machine should be left for 20 minutes to allow it to reach the correct operating temperature. By having an automatically filling water system the internal atmosphere of the unit will be humid, improving the "hold time" that products can be kept for.
3. Whenever the flaps are raised on the Pass Through unit they should also be lowered in a controlled manner and not allowed to drop and bang against the side of the machine. Allowing the flaps to hit the machine can result in damage to the doors but more importantly weaken the bulbs and reduce their life.
4. Ensure that the water supply is maintained – otherwise the machines humidity will be affected.

(Please Note: The Amber lighting will not work on VI1100E version as its not equipped with Autofill feature.)

The machine is factory set to 70°C. This is adequate to hold cooked food at a safe and legal temperature (i.e. above 63°C)

Use of Accessory Parts

1. The divider can be inserted on the wired racks to separate the cooked foods in the unit.



2. Loading tray can be seen below which can be used to load the cooked foods into the unit.



Cleaning of Pass Through machines

1. The water tray should be removed daily for cleaning.

TAKE CARE WHEN REMOVING THE WATER TRAY

Gently lift the front of the water tray and then slide tray out of machine and fully remove the water tray. Drain water into a sink.



1. With the water tray removed the 2 outer deflector trays may be removed, (these cannot be removed with the water tray in place).




NOTE: The gastro pans, racks and rack guides are now shown in the above images.





**CARE MUST BE TAKEN WHEN CLEANING THE INTERIOR OF THE MACHINE
BECAUSE ELEMENTS, PANELS ETC. MAY REMAIN HOT FOR SOMETIME AFTER THE
HEATING HAS BEEN SWITCHED OFF.**

SPARE PARTS LIST

PART NO.	PART NAME	QTY.	
VISW15	GREEN SWITCH	2	
VISW17	RED SWITCH	1	
MFMR11TIRES	DIGITAL THERMOSTAT WITH PROBE	1	
MFLA100	OVEN LAMP	8	
MFSP25-15	INCOLOY ELEMENTS 750W	2	
MFla104	Halopin OSRAM Halogen Oven Bulb 25W 230V G9	8	
MF0CP-059	PT WATER BAFFLE	1	
VILE14	SWITCH MEMBRANE	3	

PART NO.	PART NAME	QTY.	
MFNE30	RED NEON	1	
MF NE61	AMBER NEON	1	
GSGAST40022	1/1 PAN 65MM DEEP	1	
GSGAST40002	1/1 GASTRONOME PAN 20MM DEEP	3	
MF225WELEMENT	WATER TRAY MAT ELEMENT	1	
MF51RHSPRING	RIGHT HAND DOOR SPRING	6	
MF51LHSPRING	LEFT HAND DOOR SPRING	6	
CO7911/100	GN 1/1 grid shelf stainless	12	

PART NO.	PART NAME	QTY.	
MFRELAY25A230V	25A,230V SOLID STATE RELAY (701-987-R)	1	
MF4002479	SNAP BUSH TO FIT HOLE 101.6 TO SUIT CART	2	
MFOHSL01	HIGH TEMPERATURE SLEEVING	2	
MF354Z	2 POLE 5AMP TERM BLOCK TB06	2	
MF605-649	GROMMET	8	
BESCHUKO	H05RR-F 2MTR. RUBBER C032	1	

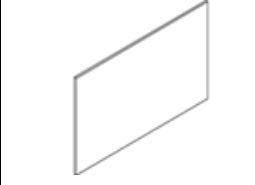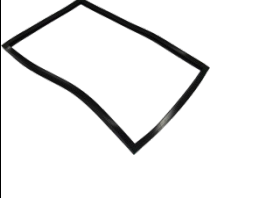PART NO.	PART NAME	QTY.	
MF817-8877	Black Nylon 66, strain relief cable bush	1	
MFEUROCONVERT	EURO TO UK CONVERTERPLUG IN BLACK19-1032	1	
MF700POLYIF	700 8DOOR I/F 347X218X5MMCLEAR POLYCARBO	12	
MF1100INDSILICO NPT	SIL-FAST-1931 223MM X 341MM	12	

Cleaning instructions – Daily

1. Disconnect the machine from the power supply before cleaning and allow to cool.
2. Remove food gastronorme pans and wire insets, wash thoroughly in warm soapy water, rinse and dry.
3. Remove the spacing racks and wash in warm soapy water, rinse and dry.
4. Doors may be wiped with a soft damp cloth, dry thoroughly taking care not to damage the plastic.
5. Note once the bottom water tray assembly has been removed the two outer trays May be removed and wiped clean.

NEVER use wire wool, scourers, abrasive cleaners, acids or bleach.

DO NOT flood or allow electrical parts to become wet.

NEVER handle the lamps; if they become dirty they should be wiped with a soft, damp, grease free cloth.

DO Dry all surfaces thoroughly removing all moisture.

A stainless steel cleaner/polish may be applied to the exterior.

FAULT FINDING

Any servicing must only be carried out by qualified personnel. Unit must be removed from electrical supply before servicing.

Problem	Probable Cause	Solution
1. Indicated ON/OFF switch does not light up	No power to machine. ON/OFF switch faulty	Check machine is plugged in and switched on. Check fuse in 13a plug, replace if faulty. Check circuit breaker at main supply board is in (ON). Check Switch, replace if faulty.
2. Digital thermostat does not indicate temperature reading.	ON/Off switch OFF Unit overheated ON/OFF switch faulty Digital thermostat faulty	Switch ON Allow to cool. Replace switch Replace if thermostat faulty
3. Lamps do not work	No power Green switch OFF Lamp not correctly seated. Faulty lamp	See section 1 Switch ON Adjust to required setting. Check fitted correctly Replace lamp
4. Unit does not heat up.	No power to machine ON / OFF switch off ON / OFF switch faulty Digital thermostat faulty Thermocouple faulty Switching relay faulty Heat element faulty	See section 1. Switch ON Replace Switch Replace thermostat As indicated on controller replace thermocouple Replace relay Replace element

Problem	Probable Cause	Solution
5. LED Does not light	Humidity Switch Off Circuit Faulty Water drawer not in and locked	Switch On. Check and replace if necessary. Check micro switch – replace as necessary.

Terms and Conditions

Claims

No claim shall be entertained by the Company unless made in writing. Claims arising from damage or partial loss in transit must reach the Company within 7 days from the date of delivery. Claims for non-delivery must reach the Company within 10 days from the date of dispatch. All other claims must reach the Company within 7 days. Damaged goods must be retained for inspection/collection.

Returns

The Company does not operate a returns policy unless the goods are defective:

In circumstances where the Company agrees to accept return of goods, a charge of 25% of the invoice value will be made.

Damage Claim Form

Machine: **1100 Pass Through Economy**

Product code: **VI1100E**

Customer name.....


Date of delivery.....

Machine serial number.....

Damage comments.....

.....
.....
.....
.....

Please indicate on the picture where the unit is damaged

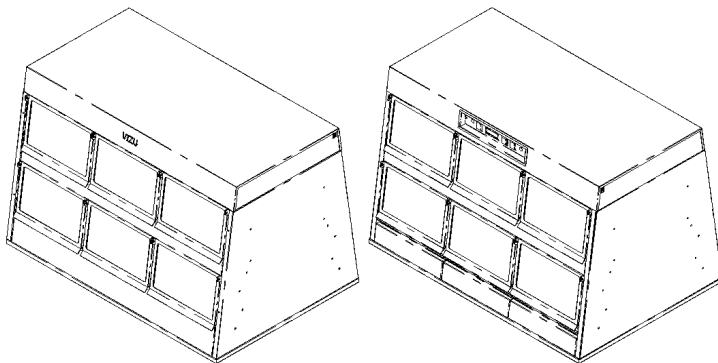

Courier name.....

Please cut this page out and post to **Fast Food Systems**

(The address is on the back of this manual)



Warranty

UNITED KINGDOM AND REPUBLIC OF IRELAND

Excepting where otherwise specified all products are subject to 12 months parts and labour warranty. Goods found defective will be repaired, credited or replaced without charge according to the terms of the Company's standard warranty, provided written notice is given within the guarantee period. In no case will the company be liable for repairs made without its knowledge or sanction, or for indirect damage, or any consequential loss or expense incurred by purchasers.

Fast Food Systems Ltd, warrants to the original purchaser that the equipment supplied to be free from defective materials or workmanship for a period of 12 (twelve) months.

The following are NOT covered by warranty:

1. Failure or breakdown caused by incorrect installation.
2. Glass parts, electric lamps or door seals.
3. Adjustment or calibration of controls - this is a routine maintenance function.
4. Abuse or misuse, including cleaning.
5. Warranty labour is only carried out during normal working hours; calls attended to out of hours may be subject to surcharges.
6. The warranty will commence either on installation or 1 (one) month from date of dispatch - whichever is the sooner.
7. Warranty on spare parts purchased for equipment outside of the warranty period is 3 (three) months from date of sale.
8. Any faulty spare parts replaced under warranty must be returned with 7 days of supply.
9. Warranty is non-transferable.

Fast-Food-Systems Ltd will not be held responsible, financially or otherwise, for any loss of business as a result of equipment breakdown.

Notes...

Model Number.....
Order ID/Job No.....
Machine serial number.....
Date of Manufacture/...../.....
Date of delivery...../...../.....
Date of Commissioning...../...../.....



ENGLISH

Electrical equipment marked with this symbol may not be disposed of in European public disposal systems after 12 August 2005. In conformity with European local and national regulations (EU Directive 2002/96/EC), European electrical equipment users must now return old or end-of-life equipment to the manufacturer for disposal at no charge to the user.

Note: For return for recycling, please contact the equipment manufacturer or supplier for instructions on how to return end-of-life equipment for proper disposal.

Fast Food Systems Limited

Manufacturer & Distributor of Catering Equipment

Unit 1 Headley Park 9 Headley Road East

Woodley Reading Berkshire RG5 4SQ

Tel: 0118 944 1100

Email: service@fast-food-systems.co.uk

Website: www.fast-food-systems.com

ISSUE 07: 24.01.24